
 




2 Enter factory default code (1234) + OK to open drawer Separate drawer from casing

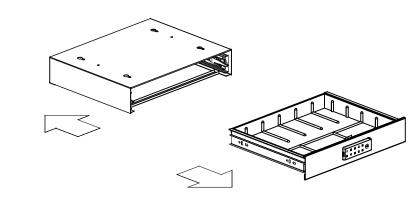



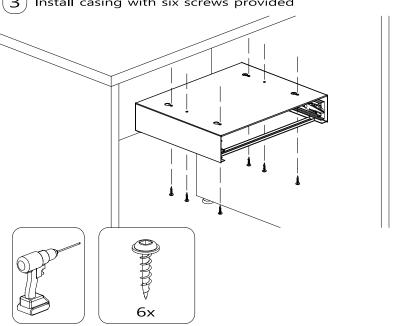

4 Reinstall drawer

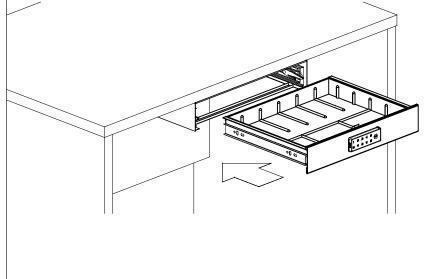




## DIGITAL DRAWER INSTRUCTIONS

<u>(5)</u>

 To change user code



- 1. Enter old code (or factory default code (1234) if first time)
- 2. Hold "OK" for 2 seconds until light comes on
- 3. Enter new code (1-8 digits) + OK
- 4. Enter new code + OK again
- 5. New code is set

 
6 Use USB key to unlock and reset to factory default code



- 1. Insert USB key
- 2. Press "OK", code will be reset to factory default code (1234)
- 3. Drawer will also be unlocked



(7) If battery is dead



- 1. Use USB power supply to temporary power lock
- 2. Replace battery when possible

WWW.IOFLIVE.COM